


# Schnellstartanleitung DJ4 für Traktor Pro 2

- Verbinde den DJ4 per USB mit deinem Computer (Verbindung über USB-Hub ist auch möglich)
- Starte Traktor Pro 2 version 2.10 oder höher (installiere ein Update falls du eine ältere Version hast)
- Öffne Traktor's Preferences und wähle den Tab 'Controller-Manager'
- **(1)** Importiere Setupdatei von CD durch Klicken der Add-Taste (TSI-Datei im Verzeichnis DJ4)
- **(2)** Prüfe den korrekten Namen des neuen Devices 'Faderfox DJ4 Vxx TP2.....'
- Geh sicher, das du nur eine Instanz des DJ4-Devices in deiner Device-Liste hast, sonst kann es zu Doppelbefehlen kommen
- **(3)** Aktiviere die Midi-Ports 'Faderfox DJ4' für diese Device (erfolgt meistens automatisch)
- Synchronisiere den Controller mit Traktor Pro durch Drücken der beiden roten Tasten am Gerät (erfolgt meistens automatisch)

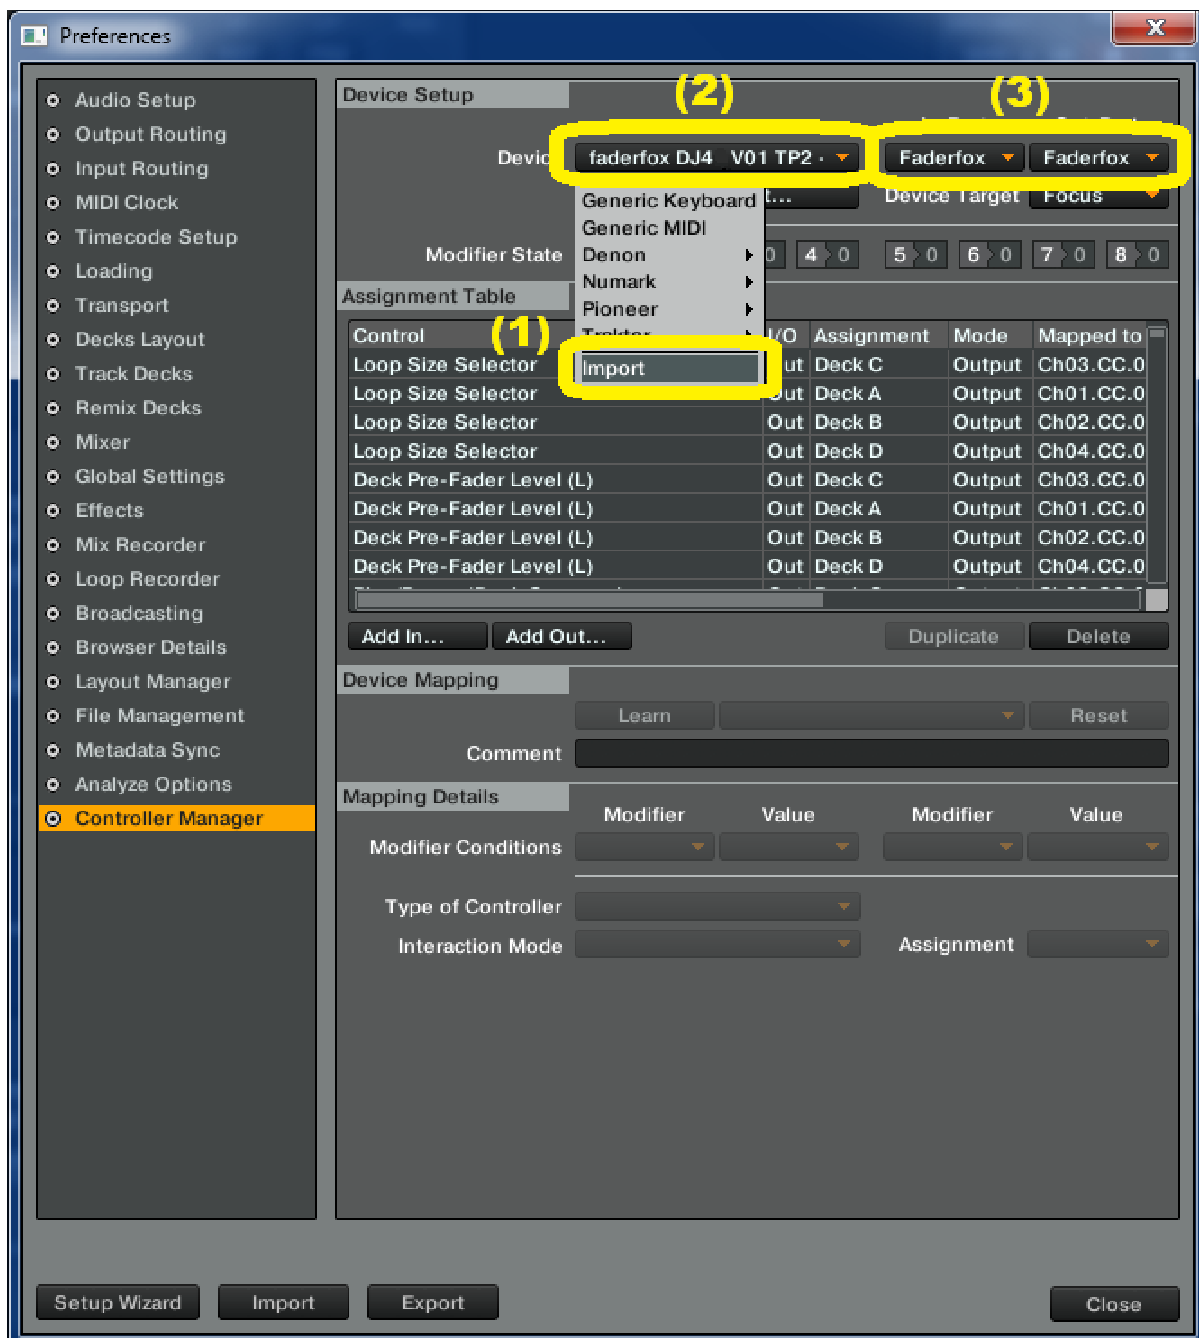

# DJ4 - Traktor Pro setup V01

FX 1 / 3 FX 2 / 4	Dry / wet Push to switch on/off FX  Push to toggle advance / chained mode	FX parameter 1 Push for FX reset  FX1 Select	FX parameter 2 Push for FX button 1  FX2 Select	FX parameter 3 Push for FX button 2  FX3 Select Push to store FX settings
L(ef)Deck R(ight)Deck	Browse thru track list Push to load selected track into deck  Seek in preview player Push to load and play/stop preview player	Seek in deck Hold down and turn to scratch  Cue point select Push to set a cue point	Pitching (tempo)  Key control (one note per click) Push to reset key	Loop size Push to switch loop on/off  Loop move Push to activate loop
Global	Browse thru tree Push to expand/collapse tree  Favorites select	Monitor mix Push to toggle SNAP	Monitor volume Push to toggle QUANTIZE	Master volume Push to toggle TOOLTIPS

Select functions of the upper four multifunctional encoders (indicated by the 7 leds)

(Press both L.Deck & R.Deck buttons to sync deck selects and pots of controller and Traktor)

Filter on / off

Prelisten  
Flux mode on/off

Low kill  
High kill

Line and Crossfader  
Line and Crossfader

Sync (indicated by green sync led)  
Assign deck A for all controls on left side (indicated by red A led)

Play / pause (indicated by green play led)  
Assign deck C for all controls on left side (indicated by red C led)

Sync (indicated by green sync led)  
Assign deck B for all controls on right side (indicated by red B led)

Filter frequency

EQ High  
Gain

EQ Mid (high)  
EQ Mid (low)

EQ Low  
Pan

Bend backward / forward  
Assign deck to FX slot 1 and 2

Cue play / Beatjump backward  
Assign deck to FX slot 3 and 4

Play / pause (indicated by green play led)  
Assign deck D for all controls on right side (indicated by red D led)

Sys led  
lit =system mode is activ

! Hold shift button for 2nd functions written on yellow (light gray) background

