


Quick installation guide for DJ4 in Traktor Pro 2

- connect the DJ4 via USB to your computer (connection via a USB-hub is possible too)
- start Traktor Pro 2 version 2.10 or higher (please update if you have a lower version)
- open Traktor's preferences and select the tab 'Controller-Manager'
- (1) import the setup file from CD (TSI-file in folder DJ4) by clicking the Add-button
- (2) check the correct name of the new device 'Faderfox DJ4 Vxx TP2.....'
- be sure to have only one instance of DJ4 device in your device list to avoid some strange behaviour
- (3) activate the midi ports 'Faderfox DJ4' for this device (mostly done automatically)
- sync the controller to Traktor by pressing both red deck keys (mostly done automatically)

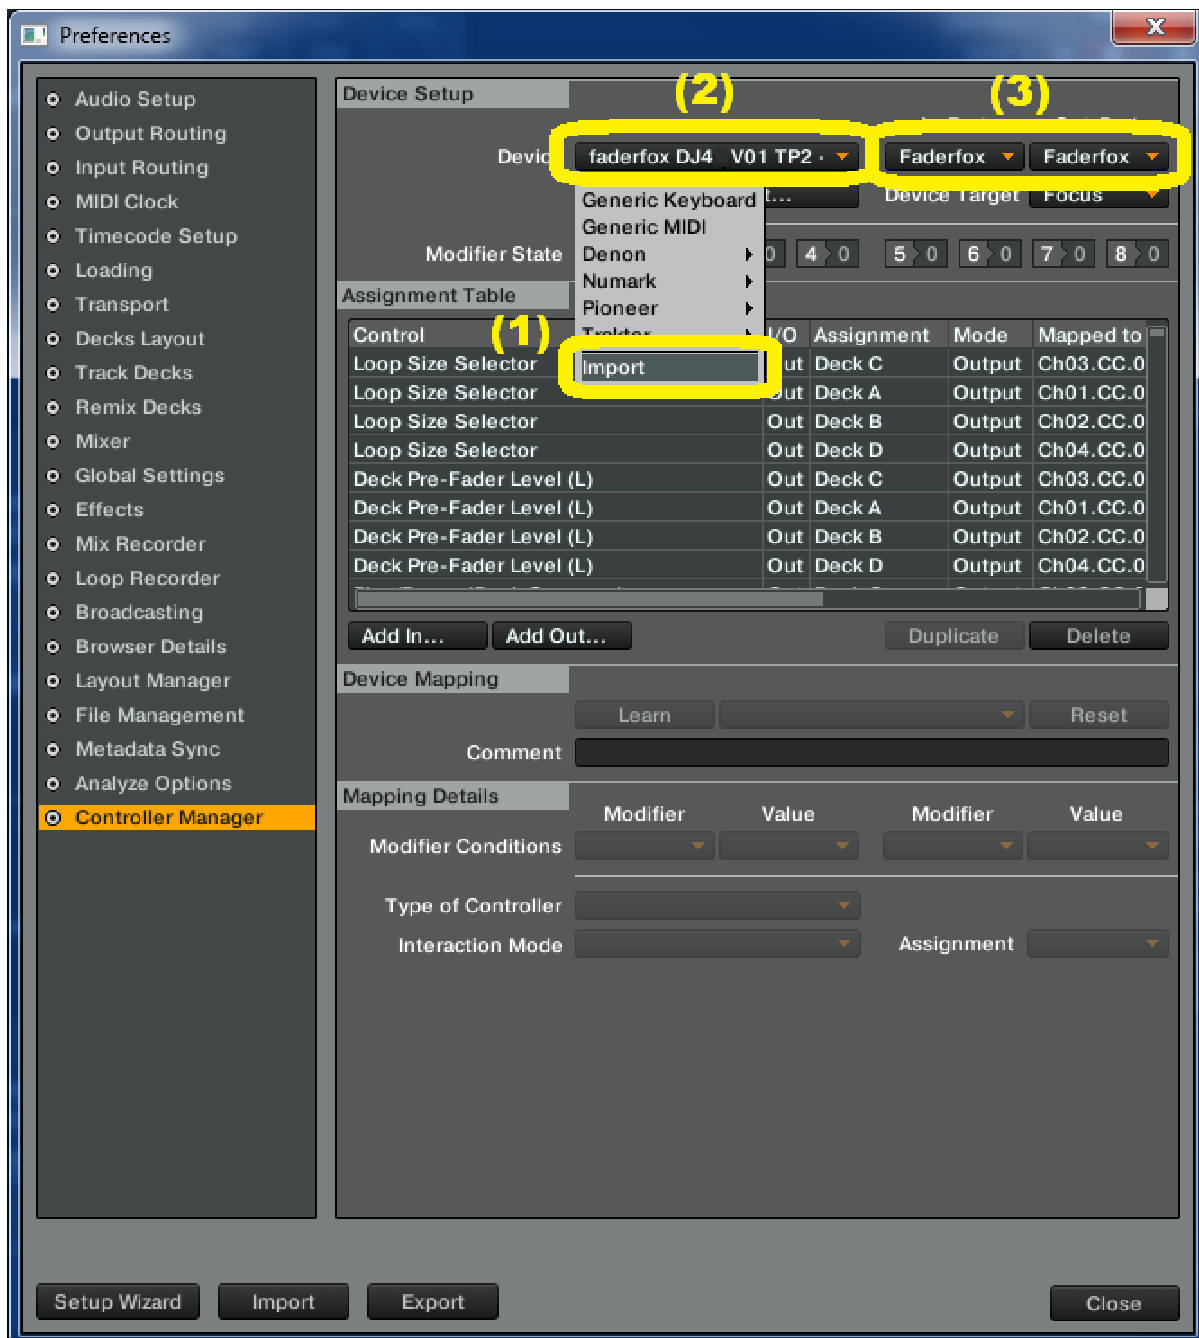


DJ4 - Traktor Pro setup V01

FX 1 / 3 FX 2 / 4	Dry / wet Push to switch on/off FX Push to toggle advance / chained mode	FX parameter 1 Push for FX reset FX1 Select	FX parameter 2 Push for FX button 1 FX2 Select	FX parameter 3 Push for FX button 2 FX3 Select Push to store FX settings
L(ef)Deck R(ight)Deck	Browse thru track list Push to load selected track into deck Seek in preview player Push to load and play/stop preview player	Seek in deck Hold down and turn to scratch Cue point select Push to set a cue point	Pitching (tempo) Key control (one note per click) Push to reset key	Loop size Push to switch loop on/off Loop move Push to activate loop
Global	Browse thru tree Push to expand/collapse tree Favorites select	Monitor mix Push to toggle SNAP	Monitor volume Push to toggle QUANTIZE	Master volume Push to toggle TOOLTIPS

Select functions of the upper four multifunctional encoders (indicated by the 7 leds)

(Press both L.Deck & R.Deck buttons to sync deck selects and pots of controller and Traktor)

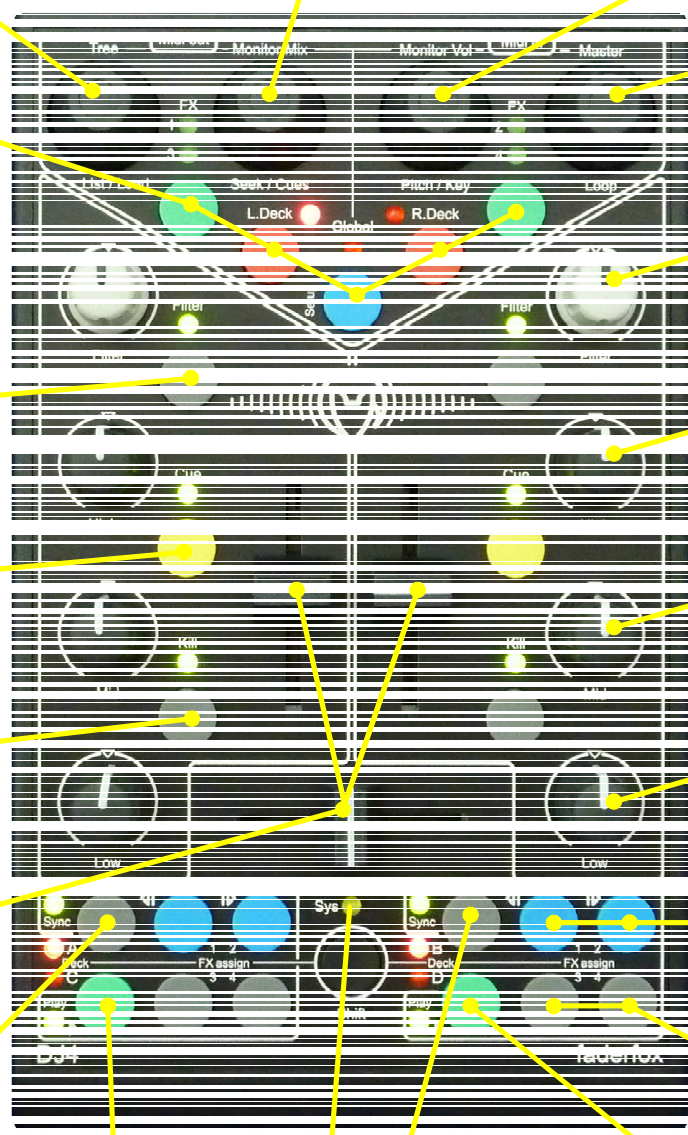

Filter on / off

Prelisten
Flux mode on/off

Low kill
High kill

Line and Crossfader
Line and Crossfader

Sync (indicated by green sync led)
Assign deck A for all controls on left side (indicated by red A led)

Play / pause (indicated by green play led)
Assign deck C for all controls on left side (indicated by red C led)

Sync (indicated by green sync led)
Assign deck B for all controls on right side (indicated by red B led)

Filter frequency

EQ High
Gain

EQ Mid (high)
EQ Mid (low)

EQ Low
Pan

Bend backward / forward
Assign deck to FX slot 1 and 2

Cue play / Beatjump backward
Assign deck to FX slot 3 and 4

Play / pause (indicated by green play led)
Assign deck D for all controls on right side (indicated by red D led)

Sys led
lit =system mode is activ

! Hold shift button for 2nd functions written on yellow (light gray) background