

Quick start guide for Faderfox micromodul UC44

- **connect** the controller with the included USB cable to your computer before you start your application
- the controller is **recognized** by the computer as 'Faderfox UC44' or 'USB audio device'
- use a **USB power adapter** (5V min 300mA) if you want to control your midi gear only
- you can also take any kind of **USB hub** to power the unit

Selecting a setup

- go in **setup mode** by pressing the blue setup key while holding down the red shift key > yellow setup LED blinks
- **select the setup** by turning encoder 1
- leave setup mode by pressing the blue setup key while holding down the red shift key > yellow setup LED off

Using as generic controller

- **setups 01 to 07** are preconfigured to use the unit as generic controller
- all controls **send standard CC commands** (control change) with 7bit resolution
- setup 1 to 6 works on 2 **midi channels** (see chapter factory reset)
- setup 7 works on 16 **midi channels** corresponding to fader/button/group numbers (fader/button/group 01 = midi channel 01, fader/button/group 02 = midi channel 02 and so on)

Work with Ableton Live

- **decompress the control surface setup** from included CD (file UC44.ZIP) and copy the included folder into Ableton's midi remote script folder
 - * On Windows this is located in \Program\Ableton\Live x.x.x\Resources\MIDI Remote Scripts
 - * On OSX this is located in /Ableton/Live.app -> Right click -> show package contents.
Navigate to contents/app-resources/MIDI Remote Scripts
- after that check the content of the copied folder, there must be 11 files of type PY at least
- don't forget to select the **control surface** 'UC44' in Live's preferences/midi sync and select the midi input & output ports 'Faderfox UC44'

- use **setup 08** to control tracks 1-16
- **encoder** assignments follows the front panel labeling in upper two rows
 - (upper row stands for 1st functions like rack macros, sends and scene select)
 - (lower row stands for 2nd functions like tempo, quantization, cue, pan, master and scene select)
- encoders are automapped only to **rack devices**
 - (other devices have to be put into rack device to control them or you map the parameters for each track manually)
- **faders** control the track volumes
- **gray buttons** select the tracks
- **green button** launch clips (1st function) or activate the tracks (2nd function)
- switch between the **1st and 2nd functions** by the black and blue keys
- **manual mappings** of all controls are possible (override of instant mappings)
- **prefer to use absolute mode** for the encoders to get values displayed immediately (instead relative mode)
- use **high resolution mode** for manual mappings to sensitive parameters like resonating filters etc. to void any audible control noises (don't forget to select midi mode 'Absolute (14bit)' in live's bottom row)