

Traktor Pro setup 'faderfox DJ3 V01.tsi'

FX 1 / 3 FX 2 / 4	Dry / wet Push to switch on/off FX (advanced) FX Select (advanced) Push to toggle advance / chained mode	FX parameter 1 or FX1 amount Push for FX reset (advanced) or to switch on/off FX1 (chained) FX1 Select (chained)	FX parameter 2 or FX2 amount Push for FX button 1 (advanced) or to switch on/off FX2 (chained) FX2 Select (chained)	FX parameter 3 or FX3 amount Push for FX button 2 (advanced) or to switch on/off FX3 (chained) FX3 Select (chained) Push for effect settings snapshot
L(ef)Deck R(ight)Deck	Browse thru track list Push to load selected track into deck Seek in preview player Push to load and play/stop preview player	Seek in deck Hold down and turn to scratch Cue point select Push to set a cue point	Key control (one note per click) Push to reset key Pitching (tempo) Push to delete selected cue point	Loop size Push to switch on/off the loop Loop move Push to reset loop size to 1
Global	Browse thru tree Push to expand/collapse tree Favorites select	Monitor mix	Monitor volume	Master volume

Select functions of upper four multifunctional encoders (indicated by the 7 green leds)
(Press both L.Deck & R.Deck buttons to get traktors monitor state)

Filter frequency
Filter frequency

Prelisten
Filter on/off
(Press both cue buttons and hold for about 1 second to enter/leave system mode)

Deck volume
Deck volume

Crossfader
Crossfader

Sync (indicated by green sync led)
Assign deck A to controllers left side (indicated by red A led)

Play / pause (indicated by green play led)
Assign deck C to controllers left side (indicated by red C led)

Sync (indicated by green sync led)
Assign deck B to controllers right side (indicated by red B led)

Sys led
lit = system mode is active
blinks = controller isn't recognized

FX 1 / 3 button: Snap
L.Deck button: Quantize
Global button: Maximize browser
R.Deck button: Cruise
FX 2 / 4 button: LFO reset

EQ High
Gain


EQ Mid (high)
EQ Mid (low)

EQ Low
Pan

Bend backward / forward
Assign deck to FX slot 1 and 2

Cue play / Cue pause (Cup)
Assign deck to FX slot 3 and 4

Play / pause (indicated by green play led)
Assign deck D to controllers right side (indicated by red D led)

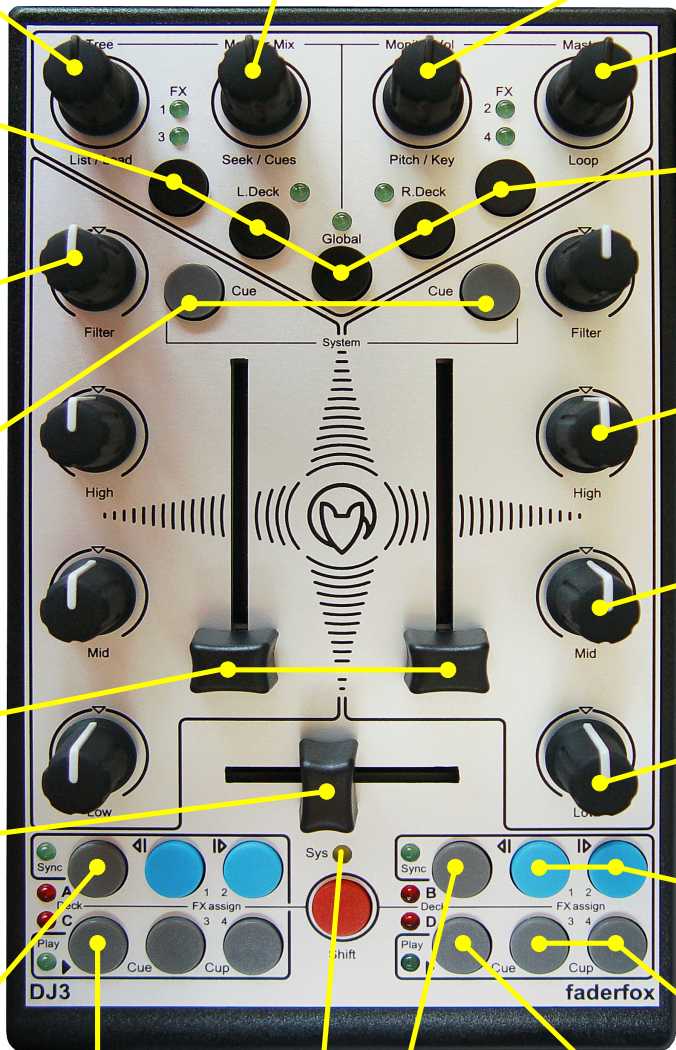

! Hold shift button for 2nd functions written on yellow (light gray) background