

Traktor Pro 2.5 setup 'faderfox DS3 V02.tsi'

- Track deck mode -

FX 1/2/3/4	Dry / wet Push to switch on/off FX (advanced) FX Select (advanced) Push to show value in display	FX parameter 1 or FX1 amount Push for FX reset (advanced) or to switch on/off FX1 (chained) FX1 Select (chained) Push to show value in display	FX parameter 2 or FX2 amount Push for FX button 1 (advanced) or to switch on/off FX2 (chained) FX2 Select (chained) Push to show value in display	FX parameter 3 or FX3 amount Push for FX button 2 (advanced) or to switch on/off FX3 (chained) FX3 Select (chained) Push to show value in display
Loop	Cue/loop move Push to set loop in point Push to show value in display	Select move step size in beats Push to set loop out point Push to show value in display	Select loop size in beats Push to switch on/off the auto loop Push to show value in display	Select move mode Push to switch on/off the loop (active) Push to show value in display
Deck	Seek in deck Hold down and turn to scratch Slower seek Push to show value in display	Move the grid Zoom wave display Push to show value in display	Key control (one note per click) Push to reset key and toggle key lock Key control (fine) Push to show value in display	Pitching (tempo) Push for pitch reset Push to show value in display

Loop recorder Play
Loop recorder Delete

Loop recorder Dry/Wet
Loop recorder Size

Loop recorder Record
Loop recorder Undo/Redo

Select functions of the four multifunctional encoders above (green led of the selected group is lit)

Deck select

Toggle deck mode
led is lit = track deck mode
led blinks = sample deck mode

Press both Deck C & D buttons to get traktors monitor state (led refresh)

Synchronize the deck to the current tempo source
Define the deck as sync master

Play / pause
led blinks for track end warning
Cue (monitor)

Loop recorder
Size, Play, Rec, Dry/Wet, Undo, Redo

Volume, **Filter**, **Length**, **Gain**

FX1 Slot 1, **FX2 Slot 2**, **FX3 Slot 3**, **FX4 Slot 4**, **Loop Volume**, **Deck Filter**

Deck select (A, B, C, D), **Shift**, **FX assign** (1-4), **Deck size and Panel mode select**

1 Delete, **2** Delete, **3** Delete, **4** Delete, **5** Cue, **6** Cue, **7** Cue, **8** Cue, **Trigger**, **Sync**, **Cue**, **Cup**

View, **Collect**, **Prev**, **Browse**, **Sample**, **Favorites**, **Next**, **Scroll**

Select previous favorite
Select favorite 'Track collection'

Browse thru track list
Push to load selected track into deck
Browse thru tree
Push to expand/collapse tree

Toggle browser view
Select next layout

Select next favorite
Select favorite 'All samples'

FX assign to the currently selected deck

Deck size and Panel mode select of the currently selected deck

Jump to hotcue 1-8 if led is lit else set hotcue 1-8
Delete hotcue 1-8
led goes off

Cue pause (Cup)
Bend forward

Cue play
Bend backward

! Hold shift button for 2nd functions written on yellow (light gray) background